



QUICK-GUIDE



The following information is an overview of how to stake-out a point quickly!

Rather than doing a full staking session, finding the point you need to stake out of the list, this is a quick and easy method to get the point you need



1. From the home screen, click the map icon.
2. All the points will now be shown in the 'map' view of the software.
3. From here, find the point, or line, you wish to stake-out.
4. For this example I want point 105. We highlight it by tapping on




the point, it will now show like this

5. We now want to tap and hold on a blank piece of screen until you




6. We then click 'Stake-out' –This will take you straight to the Stake Point screen, check the point ID is the one you wish to set out and

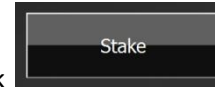

click

7. You will then go to the navigation screen

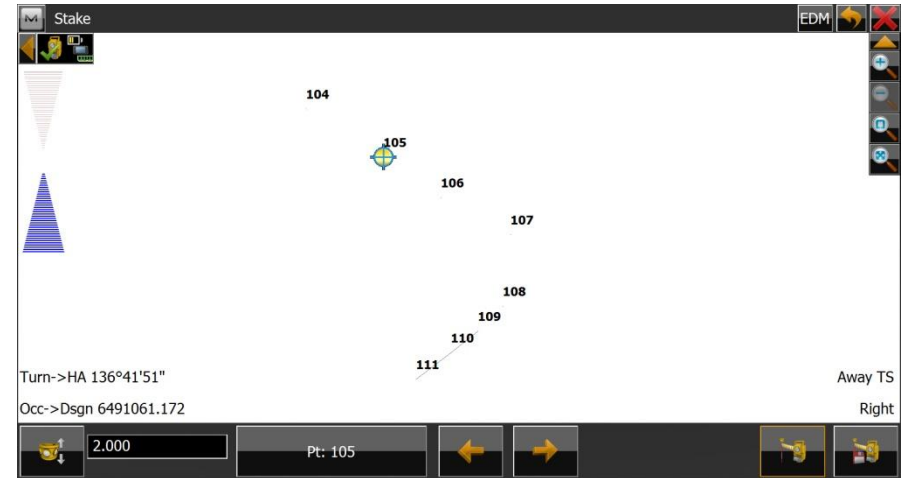

8. Once you are happy with the position, hit the store button-



9. You have now successfully located, and stored the point. This data can now be reviewed/stored for later analysis, via the stake report